

## AI Glasses User Guide


(GD Collection)

Thank you very much for choosing GetD AI Glasses!


Please read this User Guide carefully before use.

Note: The guide may be updated as new features are added.

For the latest version, please scan the QR code below:




User Guide




Download and install the GetD App before using the AI glasses.


### Packing list




Glasses x1




Carry case x1




Regular temples(set) x1



Charging cable x1




Cloth x1



User Guide x1

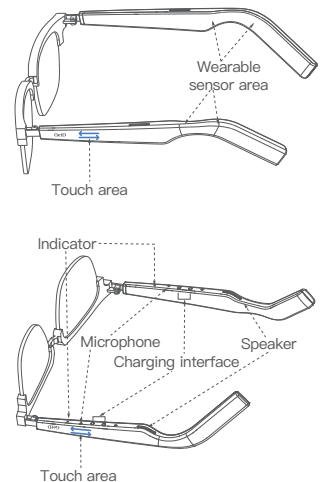

### Appearance





### Charging

The indicator light shows red while charging and turns off when fully charged.

Charging: red





Fully charged: off


### Power On

Please wear the AI glasses correctly, it will auto power-on.



**Note:**


1. If you don't hear the "power on" sound, make sure both temple lugs are close to your ears (These are the wearable sensor zones). If yes, and it still doesn't power on, the battery may be drained. Charge glasses and try again.




2. The AI glasses may also auto power-on when both hands touch the wearable sensor areas.

### Power Off


1. The AI glasses will automatically power off 1 minute after being removed.



2. The AI glasses will automatically power off during charging.




3. The AI glasses will automatically power off if the Bluetooth connection with the device is lost for more than 1 minute.



### Bluetooth Pairing

**First-Time Pairing:**

- Put on the AI glasses. It will power on automatically.
- Enable Bluetooth on your smart device and select "GetD Eyewear" from the list. You will hear "Connected" once pairing is successful.



**Reconnection:**

If Bluetooth is enabled and within range, the glasses will reconnect automatically when worn.


**Pairing With Another Device:**

Unpair the glasses from the previous device, then pair it with the new one.

### Phone Call Mode


**Answer/End Call:** Double tap  
**Reject Call:** Press and hold for 2s

**Note:** Audio will automatically transfer to your device when the glasses are removed.

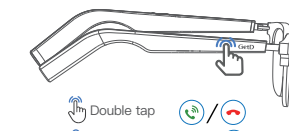


**Voice Assistant**

Press and hold the touch area for 2s to activate the voice assistant.

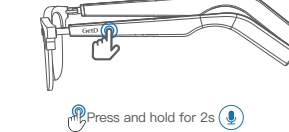


### Music Mode

**Play/Pause:** Double tap  
**Previous/Next song:** Slide back/forward right temple  
**Pause Music:** Remove the glasses

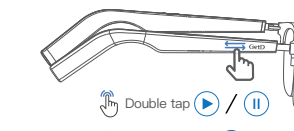


**Volume Control**

**Volume up:** Slide forward the left temple.  
**Volume down:** Slide back the left temple.

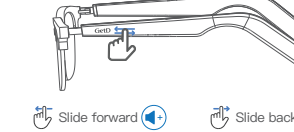

### Temple Replacement

The smart temples can be replaced with GetD regular temples (without audio and smart functions).



**Reminder**

- Please read this user guide carefully before using the AI glasses, and keep it for future reference.
- Fully charge the glasses before using it for the first time.
- If the glasses are not used for an extended period (over three months), charge it regularly.
- Do not clean dirty lenses directly. First, moisten the lenses, then gently wipe them with a soft cloth. Wipe in a consistent direction—avoid wiping back and forth or in circular motions.

**Safety Precautions**

- To prevent possible hearing damage, do not use high volume for extended periods.
- Using harsh cleaning tools or improper cleaning solutions may damage the glasses. Please use the original glasses cloth or a clean, soft cloth to wipe the glasses. Use only mild neutral cleaning solutions. Do not use abrasive cleansers, sprays, highly concentrated solutions, chemical cleaners, alcohol, or acetone, as they may cause damage, deformation, or discoloration of the frame, accessories, and lenses.
- Please operate the glasses within the temperature range of 0°C–45°C, and store the glasses and its accessories at normal temperatures. Extremely high or low temperatures may cause equipment failure.
- Do not expose the glasses to direct sunlight for long periods, as this may cause deformation, aging, or breakage.
- Do not place the glasses in high-temperature environments. The battery may explode due to overheating.
- Do not expose the glasses to liquids or immerse it in water.
- Do not clean the glasses with alcohol.
- Keep the glasses dry and avoid liquid splashes. Keep the glasses and its accessories away from rain or moisture. This glasses is not waterproof—do not wash the temples or perform ultrasonic cleaning.
- Do not heat or bend the temples, as this may damage them and cause malfunction.
- The charger must comply with the "2.5 Restricted Power Supply" requirements in the "GB4943.1

### General Information

**Warranty:** 12 months

**Service:** 24 hours

**Support:** 24 hours

**Product Name:** GetD Eyewear

**Model:** GetD Eyewear

**Color:** Black, Silver, Gold

**Weight:** 120g

**Dimensions:** 180mm x 180mm x 50mm

**Material:** PC, ABS, TPU

**Accessories:** Charging cable, User manual, Warranty card

**Notes:**

- Dispose of the glasses, battery, and accessories according to local regulations. Do not treat them as household waste. Improper disposal may result in battery explosion.
- Comply with local laws regarding the disposal of this glasses and its accessories. Support recycling initiatives.

### Hazardous Substances

Component Name	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent Chromium (Cr(VI))	Polybrominated Biphenyls (PBBs)	Polybrominated Diphenyl Ethers (PBDEs)
Plastic	○	○	○	○	○	○
Assembly parts	○	○	○	○	○	○
Metal	○	○	○	○	○	○
Battery	X	○	○	○	○	○
Accessories	X	○	○	○	○	○
Frames/Lens	○	○	○	○	○	○

This table is prepared in accordance with the provisions of SJ/T 11364.

○ : Indicates that hazardous substance contained in all homogeneous materials of the part is below the limit specified in GB/T 26572.

X : Indicates that the hazardous substance in a certain homogeneous material of such component is beyond the limit specified in GB/T 26572.

### Shenzhen GetD Technology Co.,Ltd.

Address: 1901,Building 2A,Shenzhen International Innovation Valley,Xili Street,Nanshan District, Shenzhen 518055,China.

Website: www.getd.com

Tel: 0755-86239415

GetD <sup>®</sup> 深圳格多维科技有限公司				
绘 图	蔡金爽	颜 色：单黑	未注尺寸公差以我司“未注尺寸公差标准”为标准	单位：mm
确 认		物料名称：GD系列智能眼镜_英文说明书	产品名称：GD系列智能眼镜_英文说明书	
标准化		图 号：	型 号：GD系列	
审 核		物料代码：05.10.0347-B	比例：1:1	版本号：V1.4